

PUMPA

 
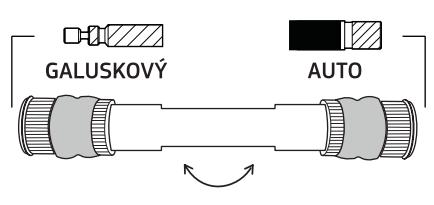
STRAW

SK

Vyšrobujte maticu aretácie hadičky a vytiahnite hadičku z tela pumpy
Vyberte správny ventil na hadičke, vložte hadičku naspäť do tela a zatiahnite maticu
Ventil pumpy našrobujte na ventil kolesa
Hustite do požadovaného tlaku

EN

Unscrew the hose lock nut and pull the hose out of the pump body
Choose correct valve on hose, insert hose back into the body and tighten the nut
Screw the pump valve onto the tire valve
Inflate tire to the required pressure

1**2**

DOVOZCA: BELVE s. r. o., Holubyho 295, 916 01, Stará Turá
Made in China. Vyrobené v Číne.

/ctmbikes
 /ctmbikes

